



DON SHAFER DISPLAY, INC.

1325 Park Ave. Omaha, NE 68105

www.ShaferDisplay.com

1.888.346.2512

BANNERS • DECALS • APPLIQUE • FOAMBOARDS • BACKDROPS • CHAIRBACKS
VEHICLE MARKINGS • STATIC CLING • MOUSE PADS • AND MUCH MORE!

INSTRUCTIONS FOR APPLICATION AND REMOVAL OF FLOOR DECALS

It is very important that you follow these instructions carefully. Application or removal of floor graphics done without following the instructions may result in damage to your floor.

APPLICATION

1. The floor surface should be sound and not cracking. It should also be clean.
2. Decals should not be applied to a freshly varnished floor. The varnish needs at least three weeks to outgas before it is safe to apply decals.
3. Always use the provided squeegees.
4. If the decal appears wrinkled from transport, squeegee over the surface prior to the application process.
5. If your decal is provided in sections, there will normally be a .75" overlap built into the sections.
6. Be careful not to stretch the decal during the application process. The decals are made of vinyl and stretching the vinyl may distort the image that is printed on it.
7. Puncture air bubbles with a pin and re-squeegee.
8. Call with any questions/concerns prior to starting the installation.


REMOVAL

1. This decal is removable for a period of up to one year. It can be easily removed without leaving any adhesive residue if you follow the removal procedure.
2. The best results are attained when the floor temperature is between 60 and 80 degrees F.
3. Start with one of the corners. Pull the decal back toward you at less than a 90 degree angle. You must pull **SLOWLY**. It may become necessary to cut off the removed portion to maintain the less than 90 degree angle.
4. If the decal is not removing cleanly, it may be necessary to use a heat gun.

Don Shafer Display products are sold with the understanding the buyer will test them before actual use and determine for himself their adaptability to his intended uses. Don Shafer Display's obligation under this warranty is in lieu of any other warranty express or implied. Under no circumstances will Don Shafer Display be liable for any loss, damage, expense or consequential damages of any kind arising out of the use or inability to use Don Shafer Display products.


Member of

 **SGIA** SCREEN PRINTING & GRAPHIC IMAGING ASSOCIATION INTERNATIONAL

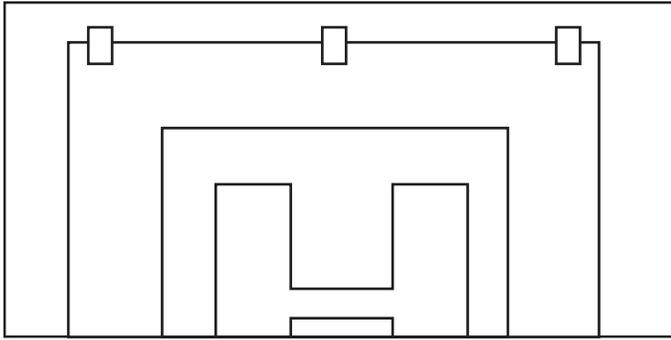


CENTER HINGE METHOD

1. Tape marking into position with small pieces of masking tape.

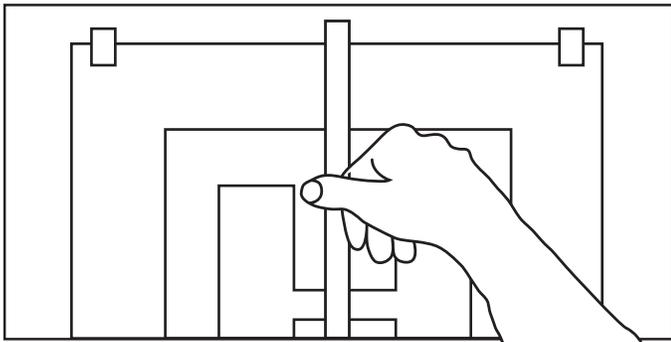


2. Apply 1" or 2" (2.5-5cm) tape hinge through center of marking, either vertically or horizontally.


NOTE: It is recommended that the masking tape be placed perpendicular to the long dimension of the marking.

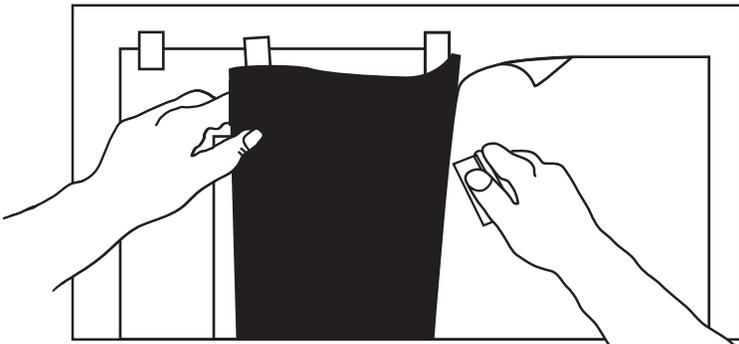


3. Fold half of marking back over hinge, peel liner off marking to tape hinge, cut liner along hinge and discard.

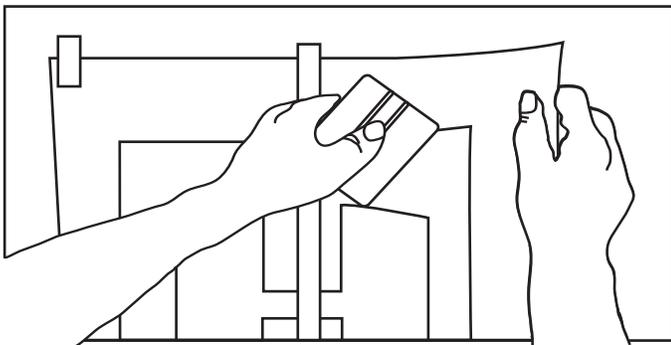


4. Remove tape hinge.

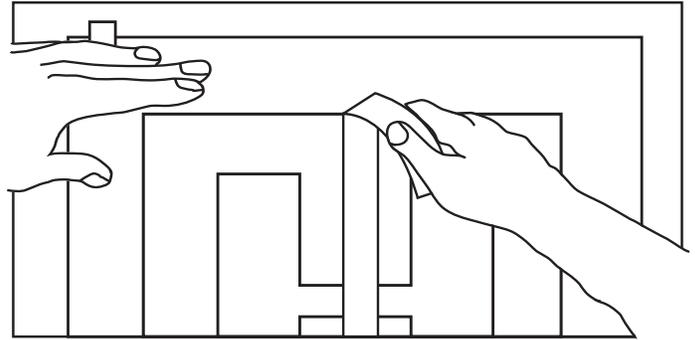

5. Fold over the other half of marking, remove liner and apply as above.

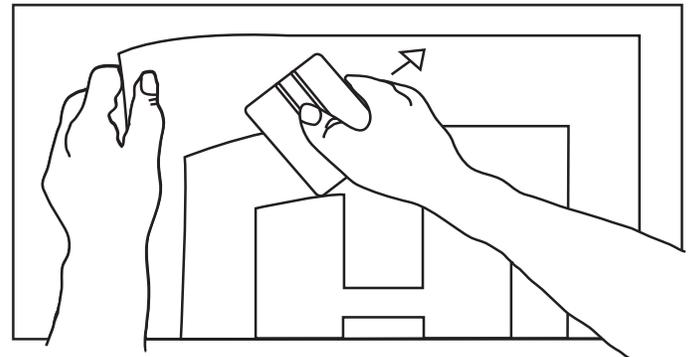

6. Squeegee

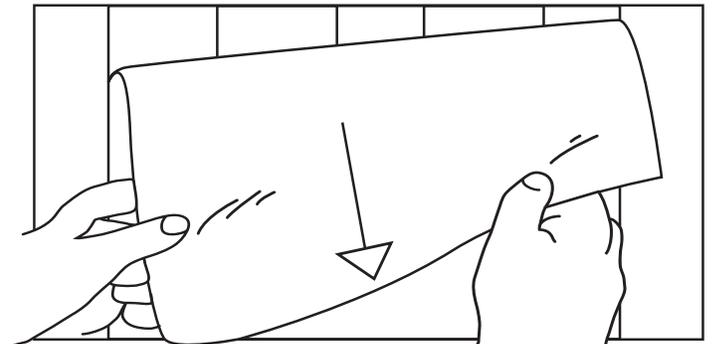

7. Remove Premask.

Remove application or prespacing tape from the face of the film by pulling tape back upon itself at a 180 degree angle as illustrated.

IMPORTANT: Re-squeegee All Edges and Overlaps



DON SHAFER DISPLAY, INC.
 1325 Park Ave. Omaha, NE 68105
 www.ShaferDisplay.com
 1.888.346.2512

BANNERS • DECALS • APPLIQUE • FOAMBOARDS • BACKDROPS • CHAIRBACKS
 VEHICLE MARKINGS • STATIC CLING • MOUSE PADS • AND MUCH MORE!